




Made in Italy

LPA DI GHILARDI SRL
VIA SERADELLO, 253
25068 SAREZZO (BS) ITALY
TEL. +39 (030) 8911481
FAX +39 (030) 8910951
info@lpasights.com
www.lpasights.com

LPA code	Pistols models
☐ TPU92BE**	Beretta 92,96,98,M9, Stock, Brigadier, 90Two
☐ TPU60BS**	Browning HP Sport
☐ TPU55BR**	Browning HP Vigilant
☐ TPU45CT**	Colt Gov't 1911-A1
☐ TPU40MK**	Colt series 70,80,90
☐ TPU84BZ**	CZ 100, CZ75 (NO 75 SP-01)
☐ TPU75CZ**	CZ 75 (NO 75 SP-01)
☐ TPU57ZC**	CZ 75, 75B, 85 (NO 75 SP-01)
☐ TPU85CX**	CZ 85
☐ TPU87BZ**	CZ P10
☐ TPU89BZ**	CZ P09 KADET, SHADOW, SHADOW 2
☐ TPU32GL**	Glock 17 to 23, 25 to 32, 34, 35
☐ TPU22RG**	Ruger Cal22 (MKII)
☐ TPU10WE**	S&W Cal.10,45 3rd gen.
☐ TPU91SW**	S&W Cal.9, 40 3rd gen. 1911 e Cal.45
☐ TPU19WA**	S&W SW99, Walther P99, PPQ, PPQM2
☐ TPU25SS**	Sig Sauer P220/225/226/228/229/239/P320/ SP2009 (NO P320 M17 / NO X SERIES), XD Springfield
☐ TPU42SG**	Sig Sauer P226 LDC
☐ TPU31SP07	Springfield (Novak Cut)
☐ TPU95TA**	Tanfoglio EAA, P9 (Springfield), Jericho
☐ TPU29TS**	Taurus PT92, 58, 100

** Please specify blade style code as shown below



code 07

Target



code 18

White outline



code 30

3 dot system

LPA Sights

www.lpasights.com

made in Italy

LPA Sights

www.lpasights.com

made in Italy



Adjustable rear sight for semiautomatic pistols
Tacca di mira regolabile per pistole semiautomat.

UK TPU sight is the single adjustable rear sight which easily fits factory dovetail of the most popular auto pistols without replacement of the factory front sight. Machined from solid steel using state-of-the-art cnc milling. Low profile. Hardened micrometric click adjustment screws for windage and elevation.

IT Realizzata in solido acciaio utilizzando la tecnologia CNC. Profilo affusolato e compatto, regolazione micrometrica in altezza e derivazione supportata da solide viti a click. Chiavetta esagonale e cacciavite di regolazioni presenti nella confezione. Non necessita di alcuna lavorazione del carrello e si allinea al mirino standard dell'arma.


LPA Sights

www.lpasights.com

made in Italy

REAR SIGHT INSTALLATION INSTALLAZIONE TACCA DI MIRA

ALWAYS MAKE SURE YOUR PISTOL IS UNLOADED
ASSICURARSI SEMPRE CHE LA PISTOLA SIA SCARICA

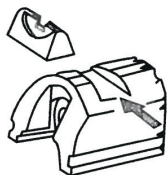


Remove existing rear sight. (Arrow direction is reversed for Colt pistols and other USA made pistols).*

Rimuovere la tacca di mira esistente. (La direzione della freccia è da considerarsi inversa per le pistole Colt e altri modelli di pistole prodotte in USA).*

Die vorhandene Kimme entfernen. (Die Pfeilrichtung ist für Colt und andere in den USA hergestellten Pistolen umgekehrt).*

Eliminar la mira posterior existente. (La dirección de la flecha es inversa para las pistolas Colt y para otras pistolas fabricadas en USA).*

Retirer le cran de mire existant. (La direction de la flèche doit être considérée comme inversée pour les pistolets Colt et tout autre pistolet made in USA).*

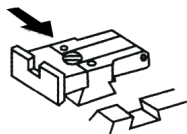

Insert the new rear sight as the arrow shows. Dovetail is tapered.


Inserire la nuova tacca di mira nel senso mostrato dalla freccia. La coda di rondine è conica.

* Use of a wooden dowel or rubber mallet will prevent damage to the sight during removal and installation. *L'uso di un tassello di legno o di un martello di gomma è consigliato per prevenire possibili danni alla tacca di mira durante la rimozione e l'installazione.

Die neue Kimme einsetzen, wie durch den Pfeil gezeigt. Der Schwalbenschwanz hat eine Aussparung.

Insertar la mira posterior nueva como muestra la flecha. La cola de milano es cónica.

Insérer le nouveau cran de mire comme le montre la flèche. La queue d'aronde est arrondie.

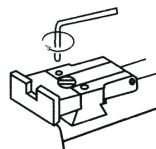

After having made the alignment with the front sight, tighten the locking screw with allen wrench.

Dopo aver allineato la tacca con il mirino, stringere la vite di bloccaggio con l'apposita chiave esagonale.

Nach Ausrichtung mit dem Korn, die Feststellschraube mit dem Inbus-Schlüssel anziehen.

Después de alinear con la mira frontal, ajustar el tornillo de bloqueo con la llave Allen.

Après avoir effectué l'alignement avec le viseur avant, serrer la vis de blocage avec la clé hexagonale.

SAMPLE IMAGES OF DIFFERENT BLADES IMMAGINI CAMPIONE DELLE DIVERSE FOGLIE



TPU92BE07



TPU25SS18



TPU91SW30

WE RECOMMEND THAT LPA SIGHTS BE INSTALLED FOR YOU BY A QUALIFIED EXPERIENCED GUNSMITH TO ASSURE PROPER FIT.
RACCOMANDIAMO L'INSTALLAZIONE DELLE OTTICHE LPA DA PARTE DI ARMIERI QUALIFICATI.