



SG4 WELDED FRONT SIGHT

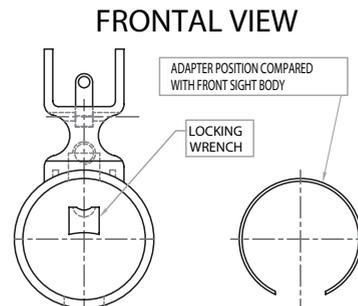

SG6 LOCKING RING FRONT SIGHTS

FRONT SIGHT ASSEMBLING

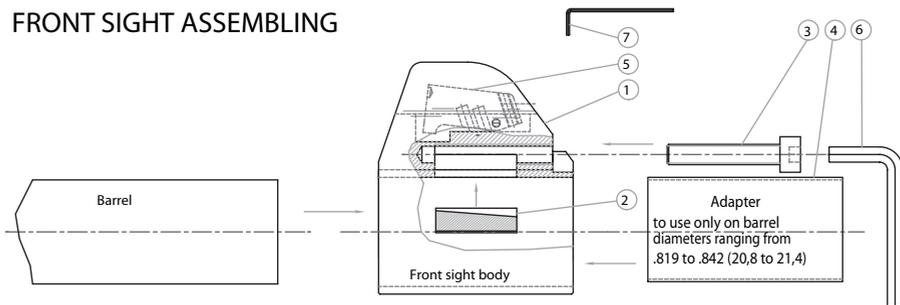

FRONT SIGHT COMPONENTS:

1. FRONT SIGHT BODY
2. LOCKING INSERT
3. LOCKING SCREW
4. RING ADAPTER (To use only on barrel diameters ranging from .819" to .842" / 20,8 to 21,4)
5. FRONT SIGHT
6. ALLEN WRENCH FOR FRONT SIGHT LOCKING
7. ALLEN WRENCH FOR FRONT SIGHT HEIGHT ADJUSTMENT

during installation install front sight upside down.

Align the front sight securing it by tightening the locking screw with the supplied allen wrench (#6). Adjust the height of the front sight by means of the provided allen wrench (#7).

ØBARREL	LEN	ØBARREL
Ø .842 (21,4)	.669 (17)	Ø .882 (22,4)
Ø .838 (21,3)	.709 (18)	Ø .878 (22,3)
Ø .835 (21,2)	.748 (19)	Ø .874 (22,2)
Ø .831 (21,1)	.787 (20)	Ø .870 (22,1)
Ø .827 (21,0)	.827 (21)	Ø .866 (22,0)
Ø .823 (20,9)	.866 (22)	Ø .862 (21,9)
Ø .819 (20,8)	.905 (23)	Ø .858 (21,8)

FRONT SIGHT ASSEMBLING INSTRUCTIONS:




Before fitting the front sight onto the barrel cut the locking screw (#3) to the proper length indicated in the chart below as determined by the barrel diameter. Insert the front sight body (#1) with the locking insert (#2) onto the barrel as shown in the sketch (note locking insert has slight taper - install with lower end facing forward).

To prevent the locking insert from falling out



SHOTGUN REAR SIGHT

Rear sight with base and suitable for quick fixing on weaver or/and picatinny (Height 8 mm. lowest as possible).

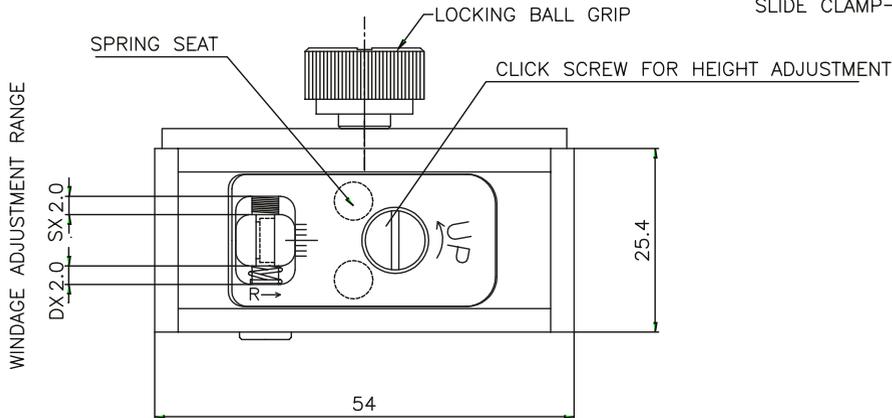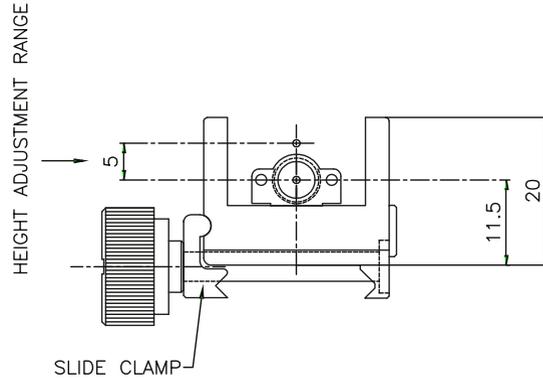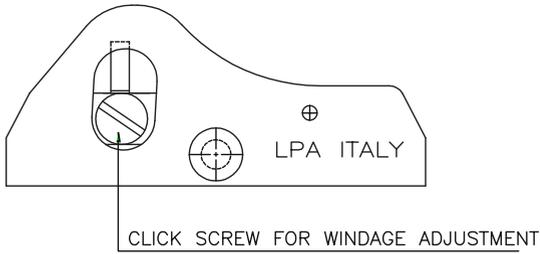

L.P.A. di Ghilardi S.R.L.
Sede legale: 25063 GARDONE V.T.(BS) - Via A.Canossi, 1 - ITALY
Sede operativa: 25068 SAREZZO (BS) - Via Seradello, 253 - ITALY
info@lpasights.com
Tel. 030-8911481 Fax 030-8910951